

Vehicle "How to" Test Index

Meters

Page – *How to:*

12. Tell how accurate your test meter is.
16. Set the digital meter for reading: open circuit, charging, or source voltage.
18. Place the meter probes to find open circuit, charging, or source voltage.
20. Set the meter for reading: the amount of source voltage available to any load.
22. Place the meter probes to find the amount of source voltage available to any load on the vehicle.
24. Set the meter for reading: the voltage drop between: the battery positive (+) terminal and the input pin to any load on the vehicle.
26. Place the probes to find the voltage drop between the battery positive (+) terminal and the input pin to any load on the vehicle.
28. Set the meter for reading: the voltage drop between the battery negative (-) terminal and the output pin or case ground from any load.
30. Place the probes to find the voltage drop between the battery negative (-) terminal and the output pin or case ground from any load on the vehicle.
32. Calibrate an inductive pick up that plugs into a voltmeter.
34. Read a 100 millivolts per amp inductive pick up.
36. Make and use a 10x inductive multiplier.
38. Extend meter leads when testing a long distance from the battery.

Meter Information

Page

172. Floating voltage values and what they mean.
173. When the testing voltage is exactly the same as the source voltage.
174. Understanding what a voltmeter is reading.
178. How accurate should your test results be?
179. About meter input impedance.

Battery testing

Page - *How to* test for voltage drop:

40. Between the battery (+) post and clamp.
42. Between the battery (-) post and clamp
56. Between the battery (+) terminal and the starter motor armature lead
58. Of a battery positive + pigtail wire.
60. Between the wire and the clamp material in a battery positive (+) pigtail wire.
62. Between the battery negative (-) terminal and where the negative (-) cable attaches to the frame or the block.
64. Between the battery negative (-) cable conductor and its end connectors.

Page - *How to:*

44. Test the open circuit voltage of the battery.
46. Charge the battery.
48. Do a battery load test using a VAT 40 or 45.
50. Do a battery load test without a load tester.
52. Find the parasitic drain on any battery using an auxiliary battery.
54. Do a 3 - minute charge test on a battery.

Battery Information

Page

176. Battery drain times when components are left on.
177. Precautions to observe whenever a vehicle component is unplugged.

Index Continued

Computer/module testing.

Page - *How to:*

- 66. Test for voltage drop of computer voltage feed wires that can be back-probed.
- 68. Test for voltage drop of computer ground wires that can be back-probed.
- 70. Load test computer voltage feed wires that cannot be back-probed.
- 72. Load test computer ground wires that cannot be back-probed.

Continuity testing and ohmmeter usage.

Page - *How to:*

- 74. Test for continuity with an ohmmeter.
- 76. Be cautious when using an ohmmeter.
- 77. Tell if solid state components are affecting ohmmeter resistance readings.

Current path, connections, and switch contact testing.

Page - *How to:*

- 78. Test for voltage drop of any length of wire.
- 80. Test for available voltage to a “hot at all times” connection.
- 82. Test for available voltage to a “hot in start or run” connection.
- 84. Load test a “hot at all times” connection.
- 86. Load test a “hot in start or run” connection.
- 88. Test any mechanical switch using an ohmmeter.
- 90. Test for voltage drop on any mechanical switch.
- 92. Test for voltage drop of a “suspect wire connector”.

Fuse, fusible link, and circuit breaker testing.

Page - *How to:*

- 94. Test for voltage drop between battery positive (+) terminal and fuses.
- 96. Test for voltage drop across a fuse connection.
- 98. Use a blown fuse to direct your troubleshooting.
- 100. Find a short to ground (resulting in a blown fuse), using a light bulb load.
- 83. Test fusible link wire.
- 102. Test a suspect circuit breaker.

Generator testing.

Page - *How to:*

- 104. Test the generator charging voltage.
- 106. Test for voltage drop between: the generator output and the battery positive (+) terminal.
- 108. Test connectors and connections of battery positive (+) pigtail wires.
- 110. Test for voltage drop between: the battery negative (-) terminal and the generator housing.
- 112. Test for voltage drop between: the generator housing and the block.
- 114. Test the generator for AC riding on DC.
- 116. Check for bad diodes in the generator using the “diode test mode”.
- 118. Test for shorted diodes in the generator using the “micro amp range” of the meter.
- 120. Verify a good generator.
- 121. Test the battery as a possible cause of multiple generator replacements.

Index Continued

Relay testing.

Page - *How to*:

122. Troubleshoot a relay controlled circuit.

Starter testing.

Page - *How to* test for voltage drop:

128. Between the battery (+) terminal and the starter motor armature lead.
130. Of a starter mounted or remote mounted solenoid.
132. Between the battery negative (-) terminal and the starter motor housing.
134. Between the starter housing and the block.

Page - *How to*:

136. Do a starter motor amp draw test with a VAT 40 or 45.
138. Do a starter motor amperage draw test with a load tester that has a voltmeter & amp meter, but no inductive pick up.
140. Do a starter motor amperage draw test with an inductive pick up plugged into a digital voltmeter.
126. Test the cranking voltage available to the starter motor.

Shared current path testing.

Page - *How to* test for voltage drop:

142. Between a truck bed and cab sheet metal.
144. Between the battery negative (-) terminal and the bulkhead ground strap.
146. Between the bulkhead ground strap and the block.
148. Between the battery negative (-) and a negative (-) pigtail attached to sheet or frame metal.
150. Across a suspect battery (-) pigtail cable or wire connector.

Other tests

Page - *How to*:

152. Stop electrical switch pop “noise” in a radio.
156. Find the percent of alcohol in gasoline.
158. Check acid content in coolant with a voltage drop test.
160. Test a rear window defogger using a test light.
161. Test a rear window defogger using a voltmeter.
162. Test thermistor temperature sensors.
163. Test permanent magnet generators.
170. Check for water in brake fluid using a voltage drop test.

Information

154. How a voltage drop can cause ring gear damage.
164. How DC motor in-rush current can affect voltage drop.
166. How DC “motor drag” can affect voltage drop.
167. Wire sizes, diameter, ohms per 1000 Foot, and rated continuous amperage.
168. Observed wire sizes used on a 2008 GMC CK .
169. Precautions to observe whenever a vehicle component is unplugged.
171. When the voltage drop is still excessive after repair, then what?

The “Hands On” Reference

A guide for the professional vehicle technician. Photos and illustrations show "*How To*" set the digital meter and where and "*How To*" place the meter probes to do effective electrical / electronic troubleshooting. Tests for batteries, computer/modules, continuity, current paths, connections, switch contacts, fuses, fusible links, circuit breakers, generators (alternators), relays, starters, shared current paths (the vehicle base system) are included. Voltage drop methods and other testing techniques are shown and explained. Each test can be quickly located and used at the vehicle with the index beginning on page 6. This book was designed as a “ready reference” to illustrate, inform and help today’s vehicle technicians. A publication of Vested LLC ©

Vestest.com / Helping Today’s Technicians Understand Today’s Technology